

ITS Beacon — Arrow Panel

Arrow Panel radio adaptation

Posts GPS location and 'Arrow Panel status' to XML feeds for access by transportation departments and major navigation data services.*

Upon activation of the Arrow Panel:

- ◆ Transmits location and 'ON' status.
 - ◇ LEFT/RIGHT/DOUBLE arrows (Static Arrow, Moving Arrow, Sequential Arrow, Sequential Chevrons)
 - ◇ CAUTION (Flashing Corners, Flashing Line, Alternating Diamond)
- ◆ Status posted to XML within 2 minutes.
- ◆ Transmits Arrow Panel status every 15 minutes.
- ◆ Re-transmits location and status if the Arrow Panel moves more than 300 ft.

Upon de-activation:

- ◆ Transmits location and 'OFF' status.
- ◆ Status posted to XML within 60 seconds.
- ◆ Updates location and 'OFF' status at 4 hour intervals

Reporting:

- ◆ XML or JSON posting for agency data centers



- No training required
- No changes to operational procedures
- Three-year Data/Comm service included in purchase
- One-Year Limited Warranty

iCone Products LLC, 3279 Cottrell Road, Cato, NY 13033
(315) 626-6800

www.iconeproducts.com www.iconetraffic.com