

Your ConnectedTech™ Hazard Beacon

#1 - Mount with sky visibility

The Hazard Beacon kit has internal antennas for satellite navigation and cellular reception. Therefore the box needs to be mounted such that the sky is largely visible.


For best performance mount the box so that the top left corner is upward. The backrack of a truck is a good location to place the Beacon.

#2 - Wire to power and flasher power

Most Hazard Beacons will come with an 18 guage, 3 conductor wire (red/black/white). The red and black go to the vehicle's 12 VDC positive and ground. The white goes to the switched side of the flasher's positive line.

#3 - Support

Questions can be answered by calling the iCone® support line (315) 579-3515 or emailing support@iconeproducts.com

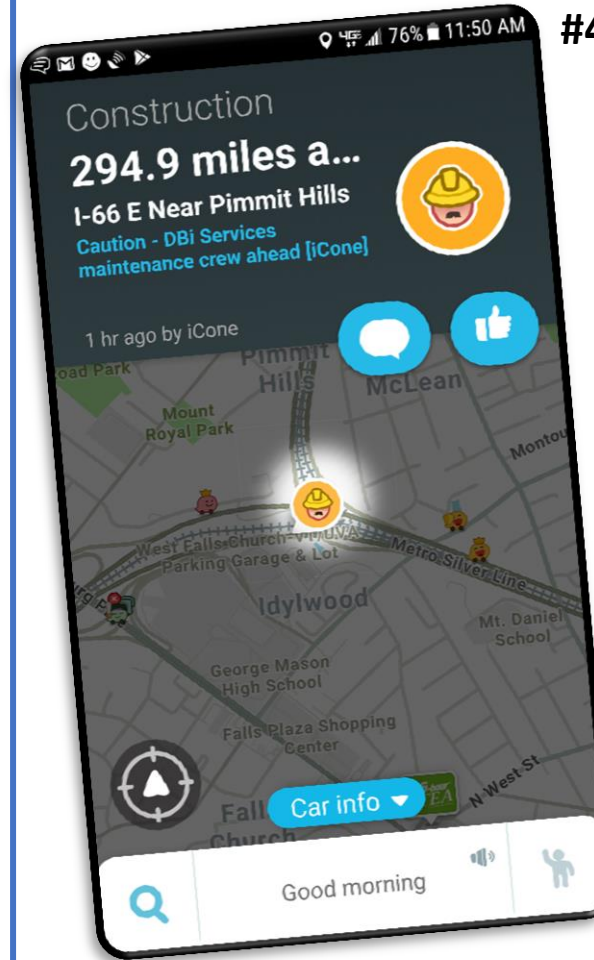

#4 - Register your Hazard Beacon!

In order to use the full iCone® services you must register your Hazard Beacon serial number by emailing the following information to: support@iconeproducts.com

Serial Number
Owner's name
Technical contact name
Contact address, phone number, and email address

#5 - In the field

When the vehicles hazard lights are switched on the Hazard Box determines its location from the GPS system and sends a message to traffic systems that says, 'there is a work vehicle here'.

When the switch is turned off traffic systems are told the construction is finished.

Responsible use of the iCone ConnectedTech™ makes highways safer and easier to navigate.

#6 - On the map

Your Connectedtech™ Hazard Beacon can be viewed on www.iconetraffic.com
The location and battery status of all of your iCone® devices can be accessed at this site.

Contact support for an account.